

Installation guide Noistop® Wood - door for steel posts (DIN left)

One door-kit contains:

- 1 Door
- 3 Damping elements (1 already mounted on door)
- Lock-kit: H: 90 mm / W: 60 mm incl. door handle A2, cylinder and 3 keys
- 16 steel screws \varnothing 6x70 mm
- 28 steel screws \varnothing 3x30 mm
- 2 door hinges


STEP 1

Posts to be installed with an inside distance of 1080 mm between the 2 posts.



STEP 2

The door hinges are mounted with a 44 mm distance between the door frame and the post maintaining a minimum distance from the ground securing that the door can be freely opened/closed. – Fasten the 2 hinges with the supplied steel screws - \varnothing 6x70mm.

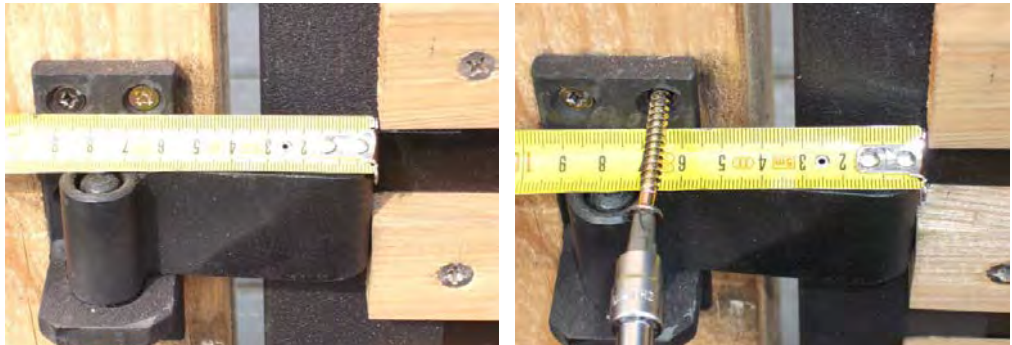

STEP 3

Place the door on the 2 door hinges.




STEP 4

Mount cartridge lock on the opposite post using the steel screws $\text{\O} 6 \times 70 \text{mm}$.
Remember that the latch and the door leaf recess must align and fit together.



STEP 5

Mount the first damping element (40x30mm) to the post with hinges using steel screws \varnothing 3x30mm.

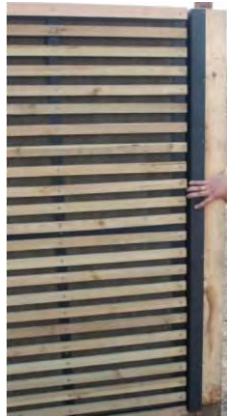

STEP 6

In the same way mount the second damping element (30x25mm) on the opposite post with cassette lock.



The finalized door

